





Tools Required

- A pencil
- 4mm Wood Bit (For fitting Timber)
- 8mm Masonry Bit (For fitting to brick and concrete)
- Rubber Mallet
- Small block of softwood

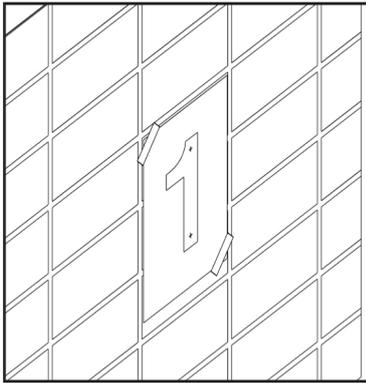


1. Tape the template to your desired mounting location ensuring the template is level.

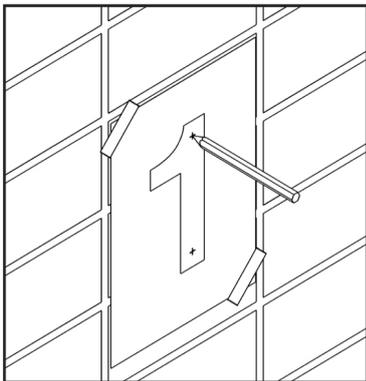


2. Mark the concealed pin locations with a pencil by piercing the template.

FITCB0057 | Revision A

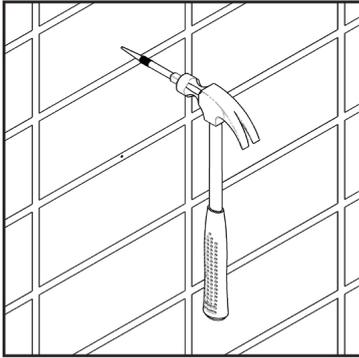


3. Remove template and use a hammer and nail. Punch to indent each marked location.

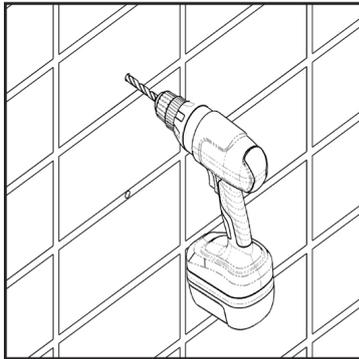


4. Using the correct drill bit, drill the holes ensuring they are deep enough to accommodate the threaded rod and/or wall plug.

i. For brick mounting, use an 8mm masonry drill bit and drill to a depth of 40mm. Push the plastic wall plug into the holes.

ii. For wood mounting, use a 4mm wood drill bit and drill to a depth of 32mm.

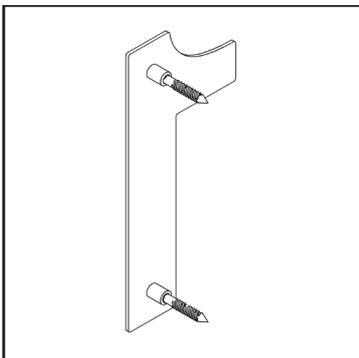

5. Screw the threaded rods into the back of the number/letter.

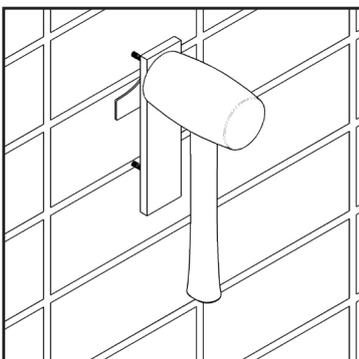

6. Push the number into the pre-drilled holes. Light tapping with a rubber mallet top and bottom will be required, using a small block of softwood as protection for the numeral/letter finish.

FITCB0057 | Revision A

+44 1228 511030

+44 1228 511885

Carlisle Brass Ltd, Parkhouse Road, Carlisle, CA3 0JU

enquiries@carlislebrass.com

www.carlislebrass.com